

Instructions and Parts List for

# GUNDLACH

## No. 737 Stretcher Hook

*Fast and Easy Carpet Stretching Over Wood Subfloors*



This innovative, lightweight tool stretches from the wood subfloor, not from the wall. This makes stretching possible in unsupported areas such as opposite glass windows, or in mobile homes. It eliminates the need for stretcher tubes and a tail block assembly. This tool is for use with any carpet stretcher whose small tube has a 1 $\frac{5}{8}$ " outside diameter.

**Caution:** *Use only on wood subfloors.*


## How to Assemble and Use

1. Assemble the stretcher hook by inserting the Prong (2) into the Body (1), securing with the Socket Set Screw (4). Make sure the Prong (2) is positioned down and away from the Body (1), and the Socket Set Screw (4) is fully tightened.
2. Insert the assembled stretcher hook into the end of the stretcher head. (The stretcher hook will fit any carpet stretcher whose small tube has a 1½" outside diameter.) Insert the pin of the Locking Pin and Collar (3) through the last hole in the stretcher head tube and through the Body (1). Then pull the collar over the tube and lock in place over the pin. *See below for a properly assembled No. 737 Stretcher Hook.*
3. To use, place the stretcher head on the carpet, being certain that the stretcher head pins are not (and will not) come in contact with the tackless strip when fully extended. If you attempt to stretch the carpet with the head blocked from moving, you may put too much stress on the prong and cause it to break.
4. Apply pressure on the top of the stretcher hook with your knee or foot, making certain that the prong penetrates the carpet and pad and engages the wood subfloor.
5. Begin stretching with light pressure to ensure that the prong has engaged the wood subfloor. Continue stretching with increasing pressure.
6. As the carpet stretches, it will move up and over the prong toward the stretcher head.



**Note:** Carpet Stretcher (not supplied) shown with properly assembled No. 737 Stretcher Hook.

## No. 737 Stretcher Hook

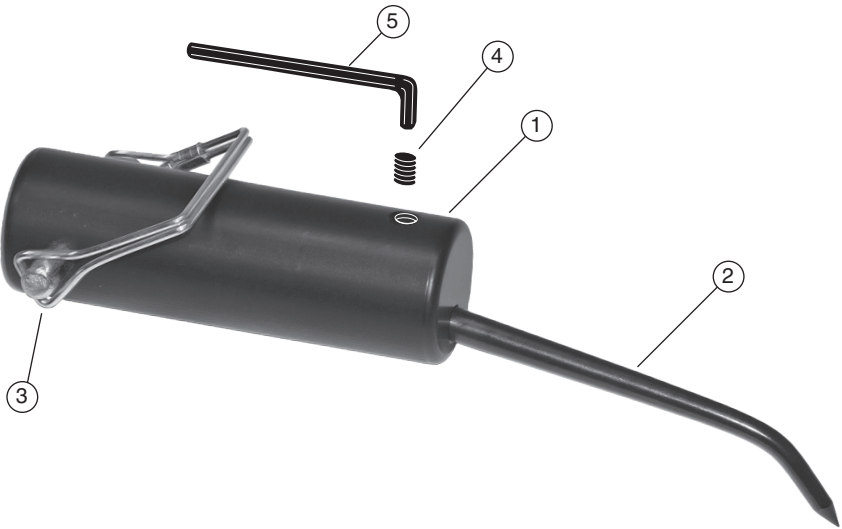

Key	Item Number	Qty. Req.	Description
1	737-01	1	Body with No. 737-04
2	737-02	1	Prong
3	737-03	1	Locking Pin and Collar Assembly
4	737-04	1	5/16-18 x 1/2" Socket Set Screw
5	737-05	1	5/32" Short Arm Hex Key

**Caution:** Use only on wood subfloors.



**Beno J. Gundlach Company**

211 North 21st Street • P.O. Box 544  
Belleville, IL 62222 • U.S.A.  
TEL: 618 233-1781 • FAX: 618 233-3636  
[www.benojgundlachco.com](http://www.benojgundlachco.com)